

INSTRUCTIONS FOR FOLDING POPOUT BANNERS


Kit consists of:

Printed banner with integral fibre-glass frame, tent/fastening pegs in front pocket, carry bag, distancing legs with velcro.


Set Up

On removing the banner from the bag, **beware** as the frame is under pressure and will “popout”. Fasten the separating legs using the velcroed ends.

Fasten legs as per the illustration below:

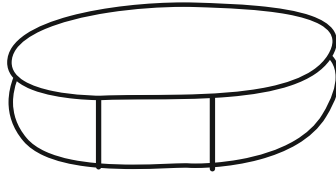

Place on the ground and fix by placing the fastening pegs through the eyelets or if on a hard surface place a weight (like a water/sand bag) on the separating legs.

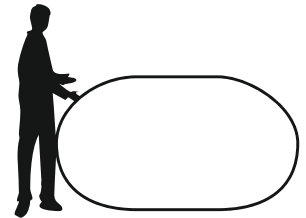

Take Down

1. Hold banner in horizontal position with the legs hanging down out of the way. (see fig 3)
2. For all models EXCEPT the round banners, squeeze inwards from the centre at top and bottom (see fig 1). The banner will fold naturally into a figure 8 (see fig 4).
3. For round banner models that fold (1m diam +) you must squeeze in the centre **AND** give a slight twist at the same time. This will ensure the banner goes to figure 8. If you squeeze only the banner tends to want to bend in half and this **COULD** cause a breakage.
4. Turn banner in its figure 8 onto its end (see fig 4) and then whilst keeping the legs out of the way push top part away from you (fig 5) to fold in half (see fig 6).
5. Tuck legs inside the folded panels and pack away inside carry bag.

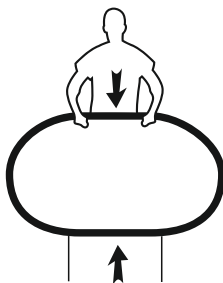


Fig 3



Fig 4



Fig 5



Fig 6

CAUTION

Please do NOT try to fold your banner in any of the ways illustrated in figs 7-10. Trying to do this may break your banner and invalidate your warranty.

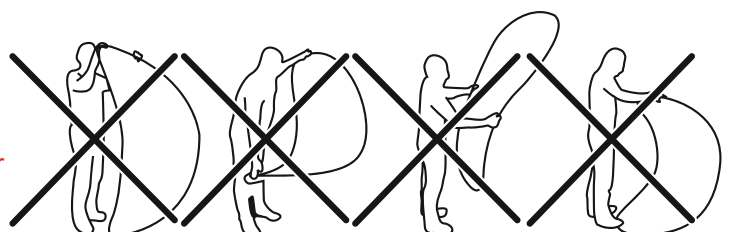


Fig 7

Fig 8

Fig 9

Fig 10