

90 Degrees



Each set consists of two aluminium connectors. One for the top and one for the bottom side.



1. Place two frames next to each other in an 90 degree angle.



2. Lift one frame and slide the connector in the slot of the outer hinge.





3. Lift the other frame and place it on top, so the hook slides in the slot.



4. Slide the second connector in the slots of the hinges on top.



5. The two frames are now properly linked.

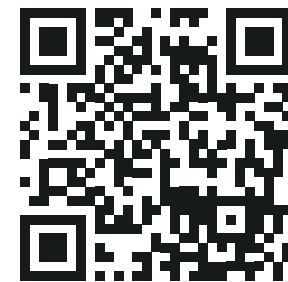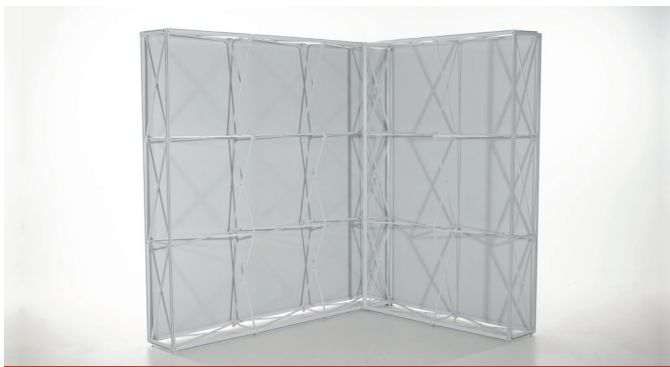

Scan for instructional video